



Vetratori-Grinding Wheels

Utensili-Tools

Ricambi per Vetratacchi Vetrasuole

 
 
 
 
 
Felt/wood spare parts for grinding wheels

M Vetratacchi Medio
For heels-medium

G Vetratacchi Grande
For heels-large

70 Vetrasuole 70
For soles-70

cod. RICVET...

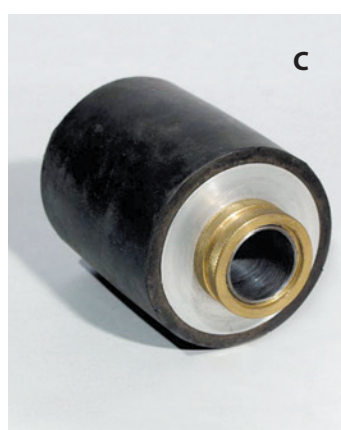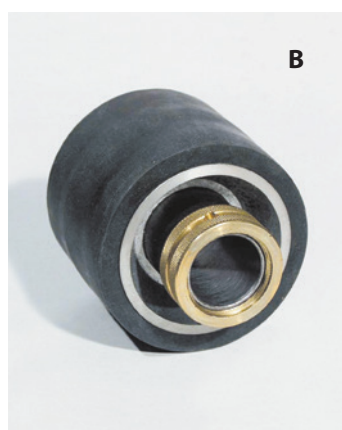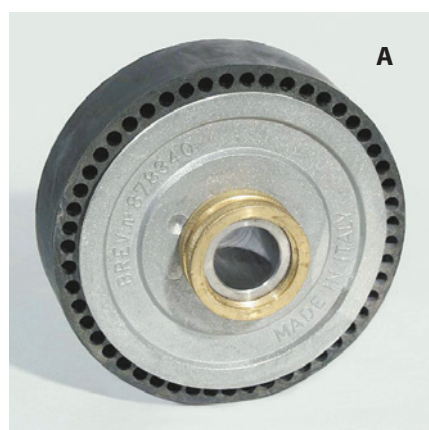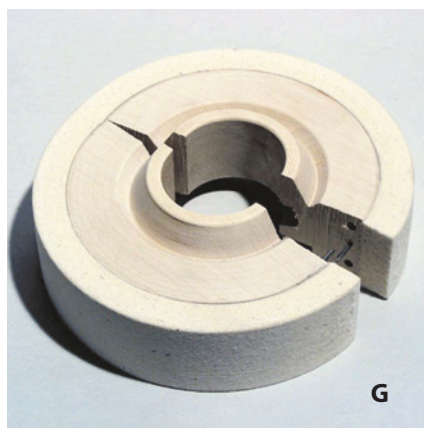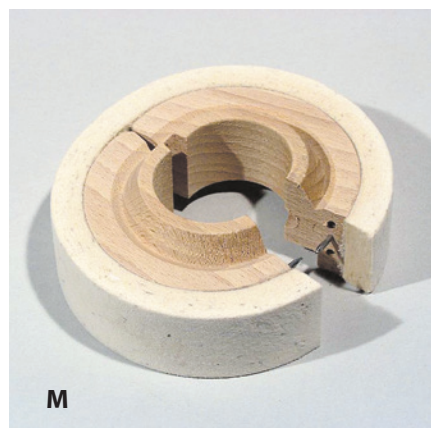

Ruote a Espansione in Gomma

Rubber expanding wheels

A 140x35

Foro/Hole: 25 30

cod. RUOE140...

B 90x70

Foro/Hole: 25 30

cod. RUOE90...

C 90x100

Foro/Hole: 30

 
cod. RUOE90L...

Spazzola in Nylon

Spazzola in nylon per togliere la colla dalla tomaia.
Nylon brush to remove the glue from the upper.

120x50

cod. SPAFINNY

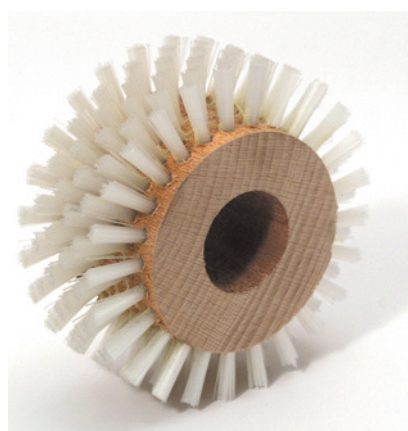

Chiave per Ruote a Espansione

Spanner for expanding wheels

cod. CHIRUO

Attrezzo Infilacursori

Device to insert sliders

cod. MACINF

Raschino Scardasso

Manico legno

Wooden roughener for leather

cod. RASCH



Nastro Scardasso

Ricambio per raschino.
Spaziato

Spare roughening tape, with spaces

cod. NASSCA